


Part# 7670

Note: When installing the mount, start all bolts and mount the alternator before tightening.

NOTE: Some heads have 3/8" bolt holes and some have 7/16". This kit includes both sizes of bolts for these holes.

If your head has 7/16" it will be necessary to enlarge the corresponding holes in the mount to 7/16".

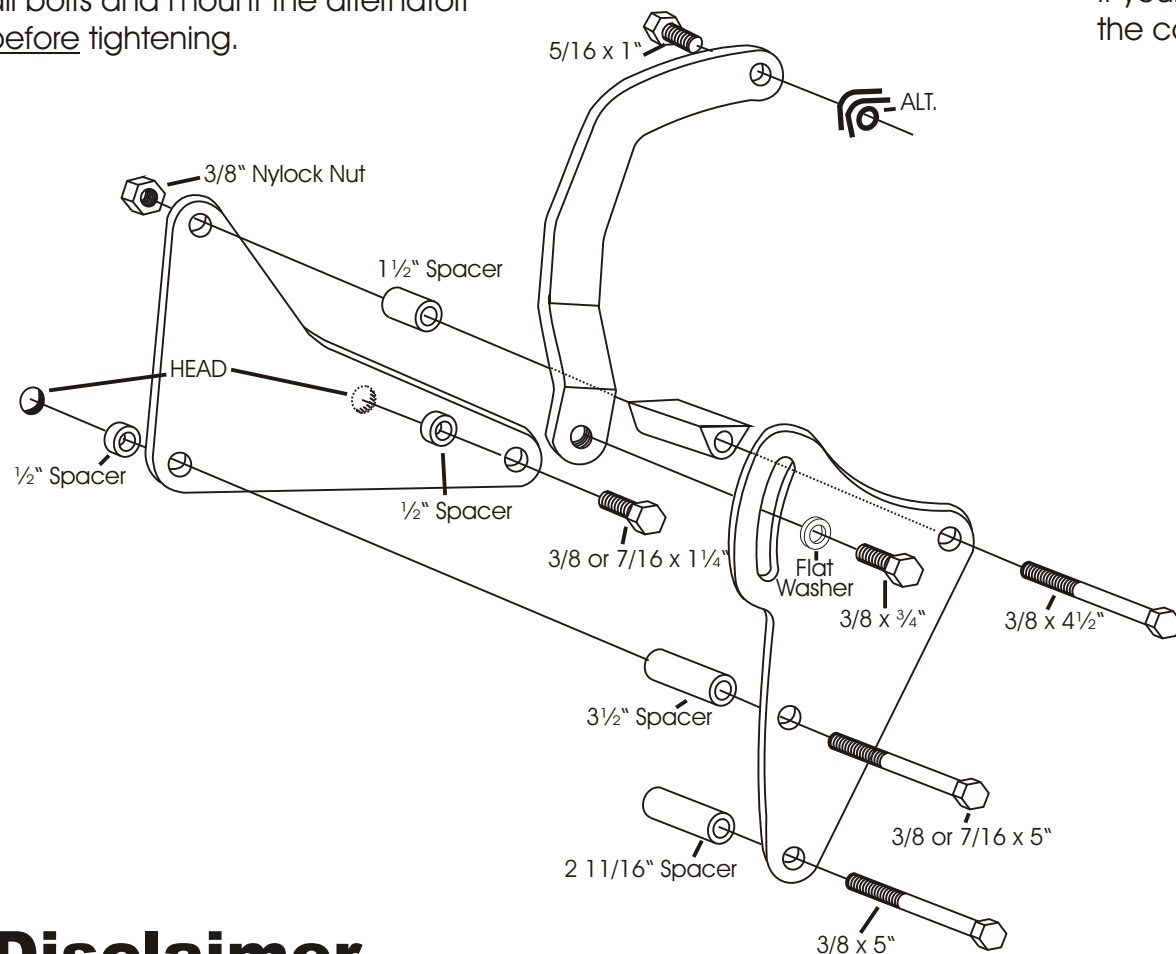

Belt info. We use a belt length of 52-53" with this mount on installations in our shop. Belt length will vary depending on diameter of pulleys.

The alternator belt will run in the second grooves from the front of the crank and water pump pulleys originally used for the factory compressor. It was designed to be used with our 8496 Passenger Side Compressor Mount.

Standard belt widths are 3/8" and are designated by the first number in the belt part number. Belt width by brand are as follows:

Gates: 7 Series followed by length

AC Delco: 15 Series followed by length

Dayco: 15 Series followed by length

NAPA: 15 or 25 Series followed by length

Disclaimer

- The purchaser is responsible for determining the suitability of any or all products purchased from Tuff Stuff Performance Accessories LTD.
- The customer recognizes that Tuff Stuff products may not be a direct replacement for their original, and some modifications may be necessary.
- Tuff Stuff will not influence your use of this product in your vehicle in any manner.
- Any Tuff Stuff product shall be installed at your own discretion.
- Remember: Any Tuff Stuff product must be installed by a professional mechanic.
- Chrome plated products returned for proposed warranty with scratches or chips will not be considered for refund or replacement.



Alternator
Mount

7670

Big Block Chevy - Drivers Side
Long Water Pump